





DuraVision™ Convex Mirror Installation Guide:



Forklift Half Dome

To attach to cab roof support, assemble mounting hardware as shown in the images below.

Or mount bracket directly to cab roof using suitable screws.

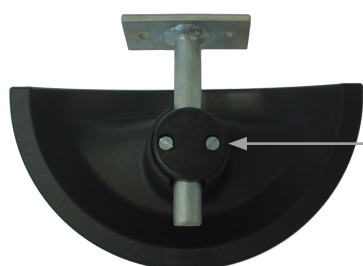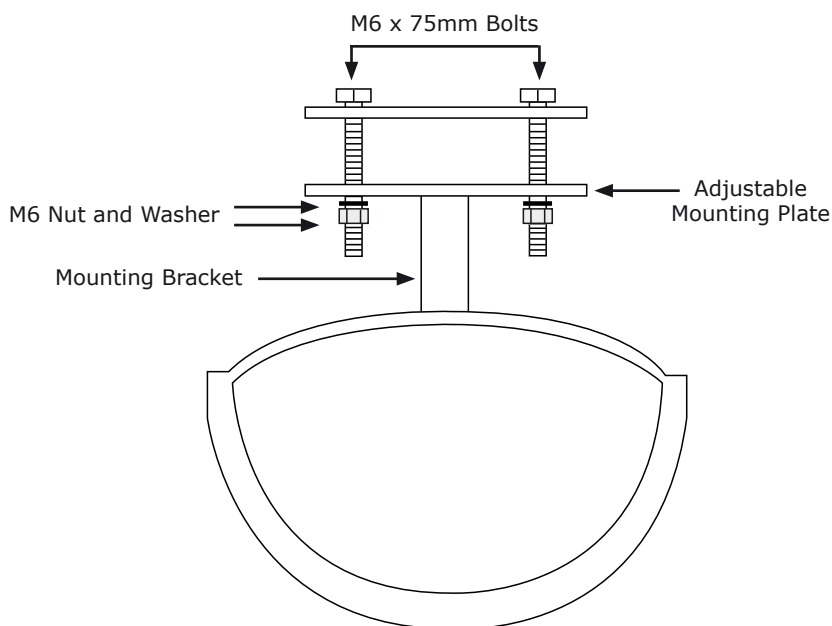

2 x M5x30mm
Machine Screws
(Unscrew to
Remove Cap)

If necessary, adjust here for
more/less torque on pivot.



Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ Indoor Economy Flush Fit Mirror
- ▶ Indoor DeLuxe Flush Fit Mirror
- ▶ Indoor Ceiling Dome Convex Mirror
- ▶ Indoor Half Dome Convex Mirror
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ Outdoor Heavy Duty Convex Mirror
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ [Forklift Half Dome Mirror](#)
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

Cleaning Guides:

- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

DuraVision™ Mirror Systems

Find out more about
the great range of
DuraVision Mirror
Systems at our
website...



www.duravision.net