





## DuraVision™ Convex Mirror Installation Guide:



### Economy Flush Fit

1. Decide the appropriate place to site the mirror to give maximum vision.
2. Use the supplied dome capped screws for fixing the mirror flush to the wall.
3. When the job is complete, totally remove the protective film from the face.

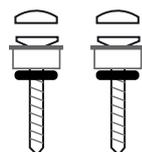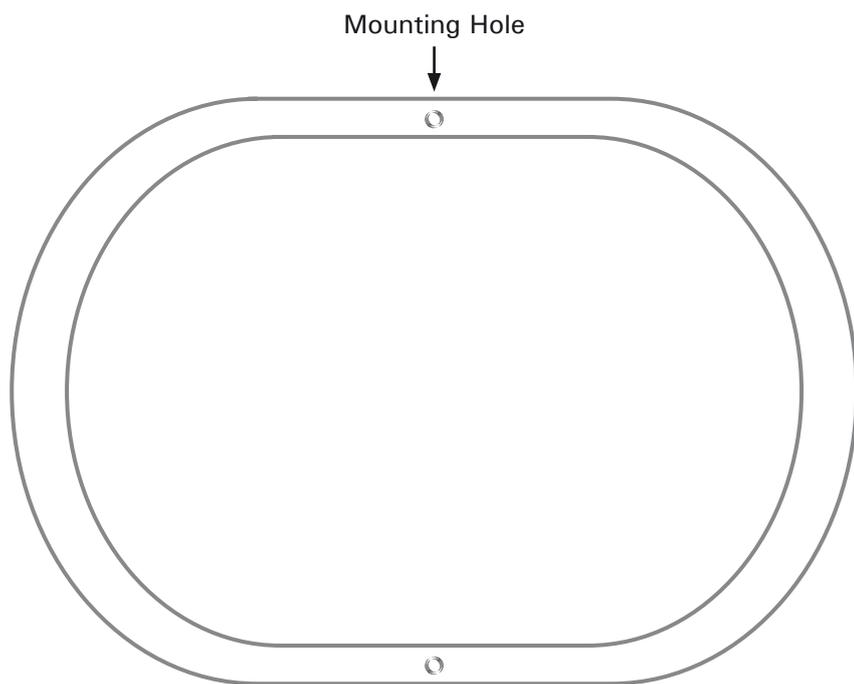

Dome Capped Screws  
Supplied

### Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ [Indoor Economy Flush Fit Mirror](#)
- ▶ Indoor DeLuxe Flush Fit Mirror
- ▶ Indoor Ceiling Dome Convex Mirror
- ▶ Indoor Half Dome Convex Mirror
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ Outdoor Heavy Duty Convex Mirror
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

### Cleaning Guides:

- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

### DuraVision™ Mirror Systems

Find our more about  
the great range of  
DuraVision Mirror  
Systems at our  
website...



[www.duravision.net](http://www.duravision.net)