





## DuraVision<sup>TM</sup> Convex Mirror Installation Guide:

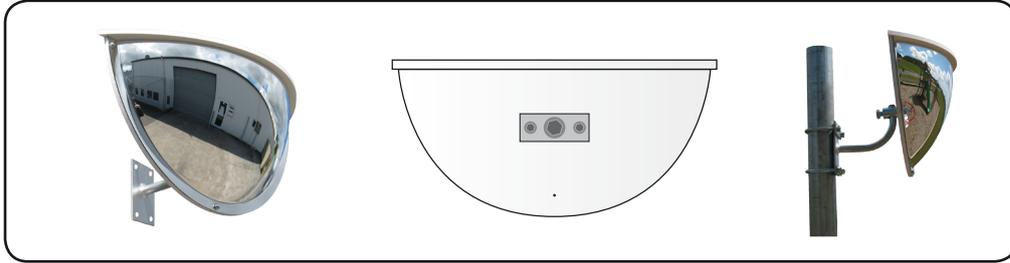

### Outdoor Half Dome Mirror

1. Decide the appropriate place to site the mirror to give maximum vision.
2. Fix J-Bracket to wall using suitable hardware, allowing enough room to get the mirror onto the J-Bracket.
3. Slide and remove the adaptor plate from the base of the J-Bracket and set aside.
4. Unscrew the bolts in the back of the half dome.
5. Thread the bolts through the adaptor plate holes and screw into the the half dome back so it is securely attached.
6. Slide the complete half dome unit with adaptor over the J-Bracket and adjust to the the desired angle.
7. Once you have found the desired angle of the mirror face, tighten the locking bolt on the adaptor securely.
8. Now the job is complete, totally remove the protective film from the face.

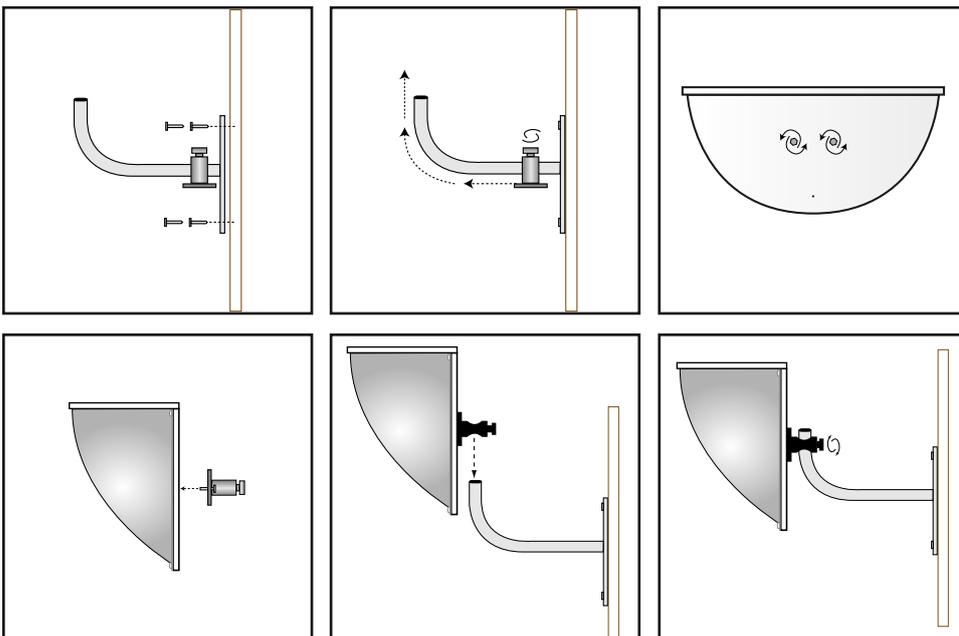

### Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ Indoor Ceiling Dome Convex Mirror
- ▶ Indoor Half Dome Convex Mirror
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ Outdoor Heavy Duty Convex Mirror
- ▶ [Outdoor Half Dome Mirror](#)
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

### Cleaning Guides:


- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

### DuraVision<sup>TM</sup> Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our website...



[www.duravision.net](http://www.duravision.net)

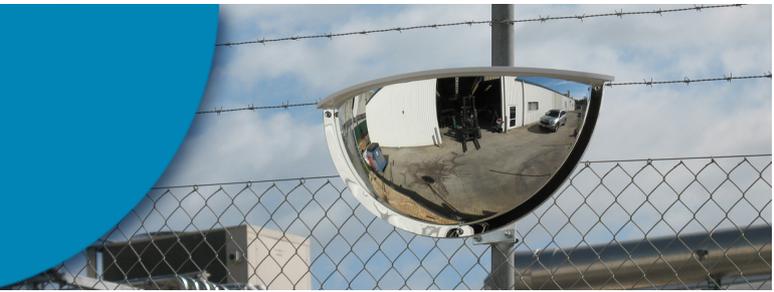


## DuraVision™ Convex Mirror Installation Guide:



### Optional U-Bolt Pack

U-Bolts are not included with Outdoor Half Dome Mirrors but are available in two sizes for mounting to a 60mm or 75mm pole.

1. Thread the U-Bolts through **one side** of the J-Bracket and then through both sides of the U-Bolt Flat plate.
2. Thread the washer and nut onto the U-Bolt and tighten.
3. Follow steps 3 - 8 on the previous page to position the mirror face.

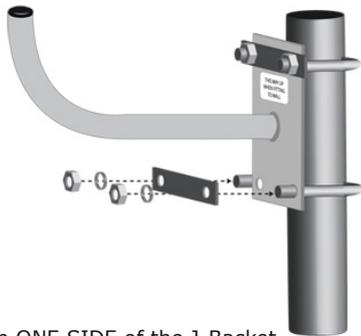

U-Bolt threads through ONE SIDE of the J-Bracket



### Installation Guides:

- ▶ Indoor Standard Convex Mirror
- ▶ Indoor Space Saver Convex Mirror
- ▶ Indoor Ceiling Dome Convex Mirror
- ▶ Indoor Half Dome Convex Mirror
- ▶ Indoor Quarter Dome Convex Mirror
- ▶ [Outdoor Heavy Duty Convex Mirror](#)
- ▶ Outdoor De Luxe Convex Mirror
- ▶ Outdoor Pro Series Convex Mirror
- ▶ Inspection Convex Mirrors
- ▶ Food Processing Convex Mirrors
- ▶ School Mirror Set
- ▶ Corrections Dome With Frame
- ▶ Corrections Half Dome With Frame
- ▶ Corrections Quarter Dome With Frame

### Cleaning Guides:

- ▶ Acrylic Mirror
- ▶ Stainless Steel Mirror
- ▶ Polycarbonate Mirror

### DuraVision™ Mirror Systems

Find our more about the great range of DuraVision Mirror Systems at our website...



[www.duravision.net](http://www.duravision.net)